



User's Guide: SS6351CH UL-2161 Listed Indoor Type 7
ELECTRONIC NEON POWER SUPPLY FOR INDOOR USE ONLY

Allanson's Pow-R-Pak SS12351CH neon power supply gives up to 12KV with High Light output. Please read all instructions thoroughly before installing our product.

FEATURES:


- Secondary circuit ground fault shutdown protection complies with UL-2161.
- Open Circuit and short circuit shutdown protection.
- Overload flash to shutdown protection.
- High Light Output, Normal Power Factor.
- Small Size Solid State Technology.
- Input Power cord and plug.

SPECIFICATIONS:

Input Voltage	120 VAC $\pm$ 3%
Input Frequency	50/60 Hz.
Input Current@Rated Load	0.9 A.
Output Voltage	2 KV – 6 KV RMS.
Output Current	35 mA. RMS.
Size (LxWxH)	6.5" inch (165mm)L x 2.7" inch (69mm)W x 1.5" inch (38mm)H
Weight	21 oz. (0.58 kg.)
VA	65

ABSOLUTE MAXIMUM RATINGS

Input Voltage	108-132 VAC
Operating Temperature	32-104°F (0~40°C)
Storage Temperature	-22-140°F (-30~60°C)

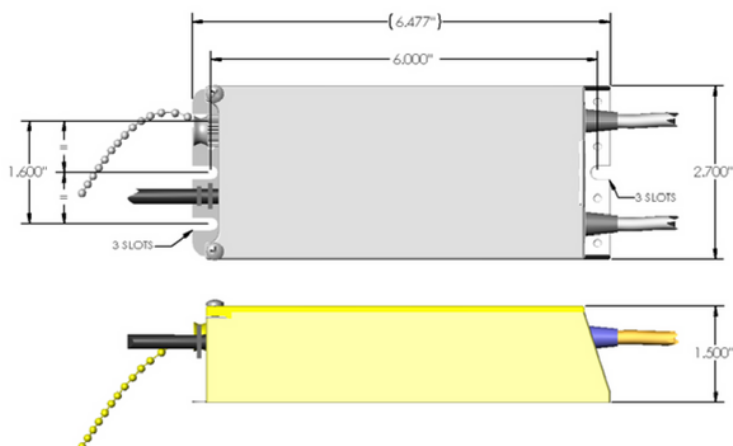

READ CAREFULLY BEFORE INSTALLATION

- o The POW-R-PAK cord must be connected to a properly grounded polarized receptacle. Removing the ground plug will void warranty.
- o Please make sure that the high voltage output leads are connected firmly to the gas tube(s) and electrodes are properly insulated before powering the unit. Lose connection of high voltage wires can cause hazardous arcing. Contact with the transformer's high voltage output leads may cause electric shock, burn or death.
- o Do not ground output leads. Do not run output leads in metal conduit.
- o When operating two or more power supplies in the same installation, make sure units are at least 6" inches (150 mm.) apart.
- o POW-R-PAK can be mounted directly inside channel letter and /or mounted on the back wall, underneath tubes. POW-R-PAK should not be mounted in a position where it is exposed to water.
- o Integral GTO wire leads do not require additional sleeving, however, precautionary measures to protect the integrity of the high voltage leads are recommended.

INSTALLATION AND OPERATION

- o Firmly secure the POW-R-PAK to the application with proper size screws or pop rivets.
- o If POW-R-PAK is mounted on key steel or metallic surface, make sure transformer is grounded to metal frame via the ground foot provided on the unit.
- o Ensure that all HV output leads and tubes are at least 1³/₄" inch (45mm) away from metal.
- o Firmly connect high voltage output leads to electrodes of the gas tube(s) and cover electrode connections with UL/CSA approved "boots" or other approved insulation.
- o Connect the POW-R-PAK to any standard 120 Volts, (3) Three wire, grounded, polarized receptacle.
- o Do NOT run GTO leads from an electronic power supply in metallic conduit. Doing it will cause severe loss of driving distance, and GTO failure.
- o Do NOT overload. The unit has protection and will "flash" if there is an over load of glass and/or excessive capacitance coupling. Work from the footage chart. If in doubt, contact our Tech support hotline at 1-800-661-7251.
- o Keep GTO leads, as short and as far from each other and all surfaces as possible. We recommend 1³/₄" inch (45mm) spacing as a minimum.
- o If long jumper leads must be used, place these as close to the middle of the glass run as possible. The voltage and capacitive current will be lower closer to the middle of tube run, which will lessen the chance of over loading or tripping.



- o Balance glass load and high voltage leads as much as possible. This will reduce the probability of tripping.
- o In all signs with a border tube, it is best to wire from the center glass outwards, and to place the POW-R-PAK in the middle of the run. This minimizes current loss due to capacitance coupling through the border tube.
- o Follow all applicable UL, NEC, CEC and local codes.

TROUBLE- SHOOTING TIPS

There is a protection circuit in the POW-R-PAK that will interrupt power whenever an abnormal operation condition happens. A ground fault or a secondary open circuit will trip the unit. The POW-R-PAK will flash the tubes (sign) before shutting down in case of a short circuit, an open circuit, or a ground fault. Overloading the power supply will result in the sign flashing continuously, until eventually tripping. Please follow the procedure outlined below.

Remove power from the POW-R-PAK. This action will reset the protection circuit. Wait 10 seconds before reapplying power. If tripping continues, remove power and check the following:

- o Are the output leads connected securely and properly to the gas tube(s)?
- o Is the gas tube broken or cracked, resulting in an open circuit?
- o Is one of the tubes leaking?
- o Is there a ground fault condition occurring within the system?
- o Is an unbalanced loading causing false tripping?
- o Are the H.V. leads too close to any metal or ground plain? Remember to keep minimum 1³/₄" inch (45mm) clearance from conductive or combustible surface.

After completing the above check list and rectifying any detected problems, reestablish the input power to the transformer to energize the gas tube (sign). If the POW-R-PAK still does not work properly call customer service at 1-800-661-7251.

Footage Chart (ANSI)

	Tube Diameter	Driving Footage
Mercury	10mm	5' – 12'
	12mm	7' – 18'
	15mm	9' – 23'
Neon	10mm	4' – 11'
	12mm	6' – 16'
	15mm	7' – 19'

Note: Each additional pair of electrodes is equivalent to one foot of tubing. The above footage chart is intended as a guide only. Actual distance will vary due to application.

Allanson International, Inc. Warranty

Allanson International Inc. warrants to the purchaser that the ballasts and or transformers will be free of defects in material and workmanship. Should any properly installed ballast or transformer prove to be defective within two years from date of manufacture, Allanson will at its option, repair or make available a replacement.

The liability of the company to the purchaser shall not exceed the cost of supplying a replacement. The company is not liable for transportation or installation expenses.

The warranty is in lieu of any other warranties, whether written oral or implied.

Allanson International Inc.
83 Commerce Valley Dr. E.
Thornhill, ON L3T 7T3
Toll Free: 877-264-8444
Local: 416-755-1191
Fax: 416-7523-6717
Online: allanson.com
Email: cservice@allanson.com